REDRAGON

CHAZZIS

WIRED ERGONOMIC GAMING MOUSE

Wired Ergonomic Gaming Mouse Operating Instructions

US UK


Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

Button Instructions

1. Left button
2. Right button
3. Scroll wheel (Click as middle button)
4. Side button, defaulted forward
5. Side button, defaulted backward
6. DPI+
7. DPI-
8. Mode switch (on the bottom)

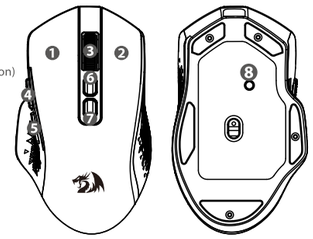

Quick start guide

Wired Connection

Connect the mouse to computer with USB cable, the computer will recognize and configure the mouse automatically

DPI adjustment and indication

Press ⑥/⑦ to adjust DPI +/DPI-, 5 levels adjustable .The mouse supports max 24000DPI adjustment. Default DPI & indicator color

1. RED --------- 400
2. BLUE ------- 800
3. GREEN ----- 1600
4. PURPLE --- 2400
5. YELLOW --- 3200

Report rate adjustment

1. The mouse supports adjust report rate [125Hz/250Hz/500Hz/1000Hz], adjusting in software.

For more adjustable functions, backlight setting and macro recording, please download & install mouse software to enable more possibility.

FAQ

1. If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports.
2. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
   (1) This device may not cause harmful interference, and
   (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

1. **Cleaning Instructions:** Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.
2. **Ergonomic Health and Safety Guide:** Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.
3. **WARNING:** The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

PT


Prezado usuário,

Obrigado por escolher a marca REDRAGON . Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia.

1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.
2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.

Instruções dos botões

1. Botão esquerdo
2. Botão direito
3. Botão da roda (clique como o botão do meio)
4. Botão lateral, avanço por padrão
5. Botão lateral, volta por padrão.
6. DPI+
7. DPI-
8. Chave de modo (na parte inferior)

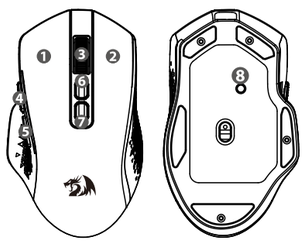

Guia de início rápido

Conexão com fio

Conecte o mouse ao computador com o cabo USB e o computador vai reconhecer e configurar o teclado automaticamente

Ajuste e indicação de DPI

Pressione ⑥/⑦ para aumentar ou reduzir o DPI. Há cinco níveis de ajuste. O mouse é compatível com até 24.000 DPI. DPI padrão e cor do indicador

1. VERMELHO --- 400
2. AZUL ---------- 800
3. VERDE --------- 1600
4. ROXO ---------- 2400
5. AMARELO----- 3200

Ajuste da velocidade de leitura

1. O mouse aceita o ajuste da velocidade de transferência [125 Hz/250 Hz/500 Hz/1000 Hz] feito no software.

Para mais funções ajustáveis, configurações de retroiluminação e gravação de macros, baixe e instale o software do mouse para ativar mais possibilidades.

Dúvidas frequentes

1. Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador ou experimente usar outra porta USB.
2. Se o cursor estiver se movimentando lentamente, saltando ou com movimentos intermitentes, experimente outra superfície. Superfícies escuras, sujas, irregulares ou brilhantes podem afetar o desempenho do mouse. É recomendado o uso de um mouse pad.

RU


Уважаемый пользователь

спасибо за выбор марки REDRAGON С целью защиты ваших прав и для более качественного обслуживания мы просим учитывать наши условия гарантии.

1. В течение гарантийного периода гарантия распространяется на устранение повреждений, вызванных проблемами в электрической цепи. Повреждения, произошедшие по вине человека, такие как разборка, жесткие удары, погружение в воду, подключение к цепи с ненормативным током или напряжением, а также ущерб, вызванный стихийными бедствиями, включая пожар, наводнение или землетрясение, в условия гарантии не включены.
2. Расходные детали (например, педаль для ног) и работы по замене запасных частей в гарантию не включены.

Описание кнопок

1. Левая кнопка
2. Правая кнопка
3. Колесо прокрутки (при нажатии работает как средняя кнопка)
4. Боковая кнопка, функция по умолчанию: вперед.
5. Боковая кнопка, функция по умолчанию: назад
6. DPI+
7. DPI-
8. Переключатель режима (на нижней панели)

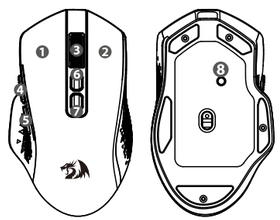

Краткое руководство

Проводное подключение

Подключите мышь к компьютеру с помощью USB-кабеля, компьютер выполнит распознавание и настройку мыши

Настройка разрешения DPI и индикация

Нажмите ⑥/⑦, чтобы увеличить/уменьшить значение DPI, всего 5 уровней. Мышь поддерживает разрешение до 24000 DPI. Цвет индикатора уровня DPI по умолчанию

1. КРАСНЫЙ ------ 400
2. СИНИЙ -------- 800
3. ЗЕЛЕНЫЙ ------ 1600
4. СИРЕНЕВЫЙ --- 2400
5. ЖЕЛТЫЙ ------- 3200

Настройка частоты опроса

1. Мышь поддерживает настройку частоты опроса в диапазоне 125Гц - 250Гц - 500Гц - 1000Гц, которая осуществляется через программное обеспечение мыши.

Для возможности более тонкой настройки функций и подсветки, а также записи макросов загрузите и установите программное обеспечение мыши.

Часто задаваемые вопросы

1. Если мышь не реагирует,убедитесь, что она корректно подключена к соответствующему компьютеру через USB-порт, или попробуйте подключить ее через другой USB-порт.
2. Если курсор перемещается медленно или рывками, попробуйте использовать его на другой поверхности. Темные, загрязненные, неровные или яркие поверхности могут влиять на произво дительность мыши. При работе с мышью настоятельно рекомендуется использовать коврик.

型号	红龙M695 4075		备注：尺寸：L100*W100mm 材质：80g书写纸，风琴折页，正反印 印刷：单色				
名称	说明书(英+巴西+俄)						
日期	2026-8-8						
页码	1 OF 1		文件编号				
绘图	吴九香	审核	香敏琪	核准		版本	A.0

Easterntimes Tech